

WTS8/9 Series

TOUCH BUTTON THERMOSTAT

The WTS8/9 Series touch button thermostat is a temperature control device with an LCD display providing real time display of room temperature or set temperature. With temperature set, it will provide on/off control signal to the fan coil valve for temperature regulation to the occupant's desired comfort.



The WTS8/9 Series designed on the basis of the standard 86 x 86mm, 75x75x50mm or 70x70x50mm installation box. The units feature Modbus communications, monitor the actual room temperature and the set temperature in real time to control the opening / closing of the valves in the fan coil units to regulate the room temperature. The WTS8/9 Series thermostat provide anti-freeze protection, as well as manual and automatic fan speed control.

The WTS9 Series wall modules work with fan coil units and regulate the room temperature by controlling the fan speed and the opening/closing of the valves. The modules usually work with the fan coil unit control valves.

TECHNICAL PARAMETERS

COMMUNICATION	RS485 MODBUS (WTS8 Series does not support RS485 communication)
PROTOCOL&BAUD RATE	4800/9600 (DEFAULT)/19200/38400 bps
OPERATINGVOLTAGES	100-240VAC 50/60Hz , 24VAC±10%50/60Hz
CONTROLACCURACY	25°C ±1°C
CONTROLSIGNAL	ON/OFF OUTPUT
LOAD CAPACITY FAN	RESISTIVE LOAD 5A, INDUCTIVELOAD 2A
VALVE	RESISTIVE LOAD 5A , INDUCTIVE LOAD 2A
PROTECTION RATING	IP20
TEMPERATURE SETTING RANGE	10–32°C
TEMPERATURE DISPALY RANGE	0–50°C
OPERATING TEMPERATURE	-10to60°C
SHIPPING TEMPERATURE	-10to 60°C
RELATIVE HUMIDITY	10–95% RH NON-CON DENSATING
REMOTE SENSOR TYPE	NTC20K

PERFORMANCE HIGHLIGHTS

- Extra large LCD and Color icon display
- Temperature display selection (room temperature or set temperature)
- Manual or automatic fan speed selection
- Anti-freeze protection
- Operating buttons lock/unlock
- Color negative display screen
- Ultra thin panel design
- Support timed shutdown
- Compatible with standard 86x86 installation box, or smaller standard installation box
- Detect and display humidity is available

ORDERING PART NUMBERS

PART NUMBER	OPERATING VOLTAGES	APPLICATIONS	SHELL COLOR	VENTILATION MODE	HUMIDITY DISPLAY
WTS9B4WMB/H	100-240Vac	2/4 pipe	White	Yes	Yes
WTS9B4WMB/N	100-240Vac	2/4 pipe	White	Yes	No
WTS9E4WMB/H	24Vac±10%	2/4 pipe	White	Yes	Yes
WTS9E4WMB/N	24Vac±10%	2/4 pipe	White	Yes	No
WTS8B4WMB/H	100-240Vac	2/4 pipe	White	Yes	Yes
WTS8B4WMB/N	100-240Vac	2/4 pipe	White	Yes	No
WTS8E4WMB/H	24Vac±10%	2/4 pipe	White	Yes	Yes
WTS8E4WMB/N	24Vac±10%	2/4 pipe	White	Yes	No


Note: The default Baud rate is 9,600 bit/s. If you require units with a Baud rate of 19200bit/s, or 38,400 bit/s are available.

PRODUCT DETAILS

OUTLOOK DESIGN



DISPLAY

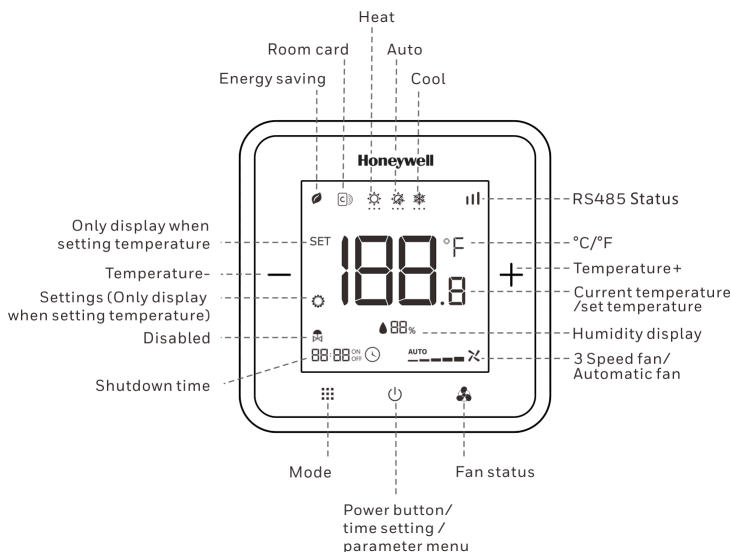

FUNCTION

VALVE AND FAN CONTROL

The WTS8/ WTS9 series thermostat reads the room temperature from the built-in sensor and maintains the set temperature by sending on/off commands to the valve. There are three fan speeds which can be set manually or automatically. In manual mode, the fan speed is adjusted by FH, FM and FL outputs. In automatic mode, the fan speed will be decided by the difference between the room temperature and the set value. The fan will shut down when the valve is not operating.

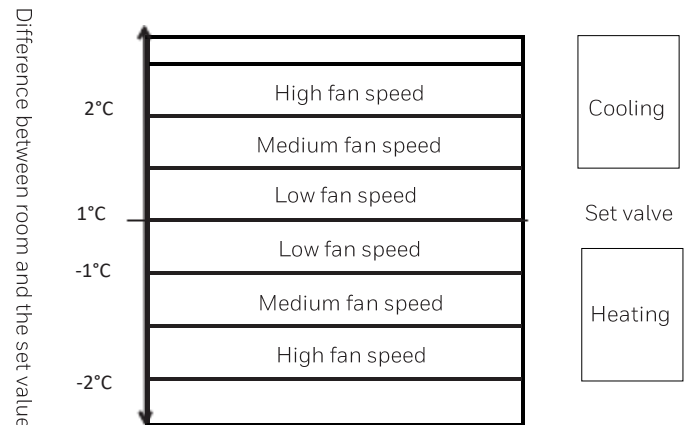


Figure 1. Automatic Fan Speed Control Algorithm

TEMPERATURE DISPLAY

Either the room temperature or the set temperature can be displayed. This can be done when installing and setting up the Thermostat

TIMED SHUTDOWN

In the shutdown state, enter the timed shutdown setting through the combination of keys. You can set the timed shutdown time from 0.5 to 12 hours, with every 0.5 hours as a step.


DISPLAY HUMIDITY

If chose a model with humidity sensor, can got an display the humidity of the current environment or hide this parameter by setting.

KEYPAD LOCKOUT

It is possible to lock or unlock the keypad while the device is not in setting mode. When locked out, the keypad will be not respond when any of the buttons are pressed.

PRODUCT SIZE (mm)

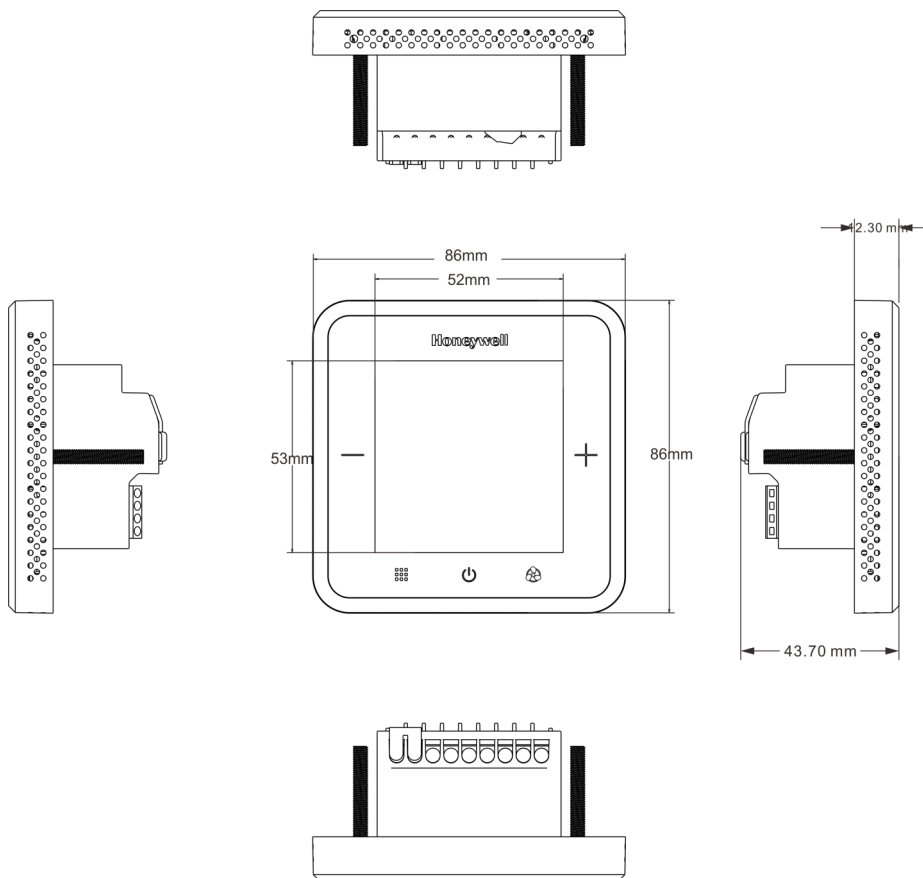

OPERATION MODES

COMFORT MODE

In Comfort Mode, Tap the Up or Down button to set the temperature. Comfort Mode includes cooling, heating and automatic functions.



VENTILATION MODE

Tap the mode key to enter Ventilation Mode. In Ventilation Mode, the fan will run at the manually set speed, with the valves shut down.



ANTI-FREEZE MODE

Anti-Freeze Mode is an option when heating. In Anti-Freeze Mode, when the room temperature falls below 6°C, the thermostat (in OFF status) will begin heating automatically until the room temperature reaches 8°C.




Installation



Please follow below drawings to do wiring and ensure the connection is reliable.


Ensure to tighten the terminal screws to prevent the wire from falling off.

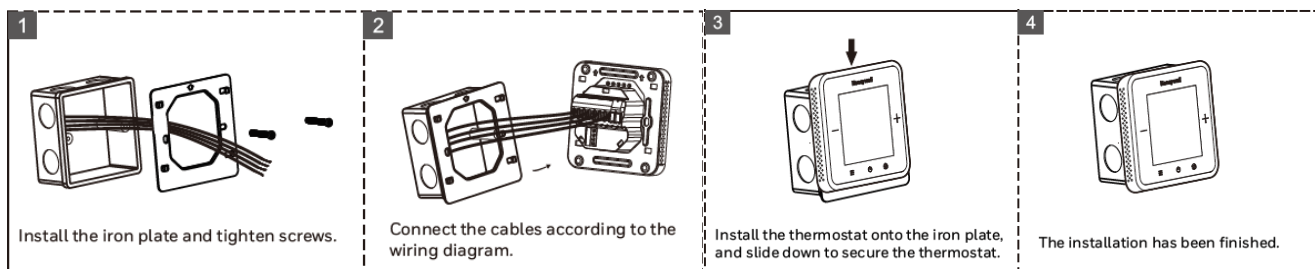


PRODUCT WIRING DIAGRAM

Part number: WTS9E4XXXX WTS8E4XXXX

4-Pipe, 2-Wire valve, 3-Speed fan, 24VAC power supply

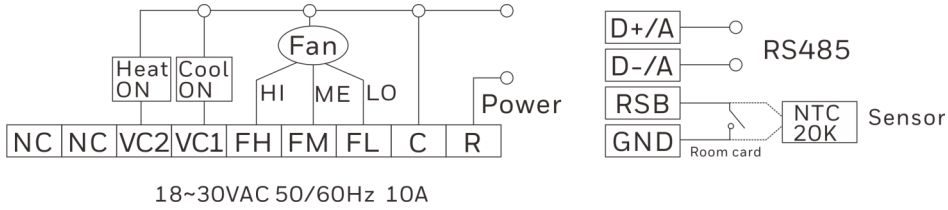


2-Pipe, 3-Wire valve/2-Wire valve, 3-Speed fan, 24VAC power supply

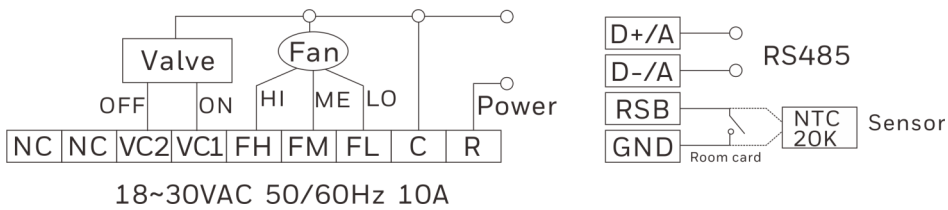


Part number: WTS9B4XXXX WTS8B4XXXX

4-Pipe, 2-Wire valve, 3-Speed fan, 220VAC power supply

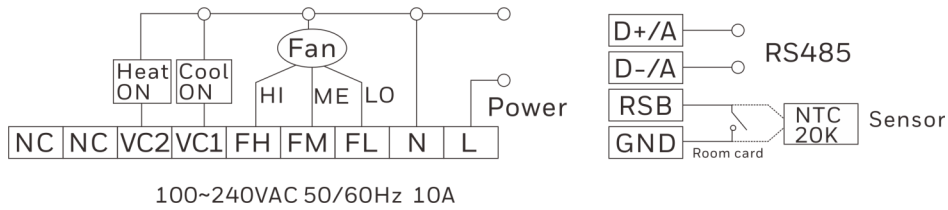

2-Pipe, 3-Wire valve/2-Wire valve, 3-Speed fan, 220VAC power supply

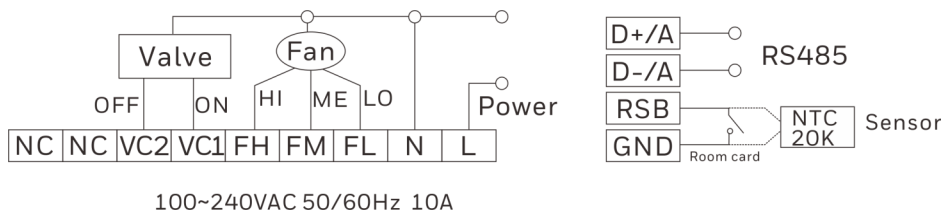

Note: WTS8 series does not support RS485 communication

TERMINAL DEFINITION

SYMBOL DESCRIPTION	
L or R	Live wire(220/24V)
N or C	Neutral wire
FL	Low fan speed
FM	Medium fan speed
FH	High fan speed
VC1	Cooling valve on/valve on
VC2	Hearing valve on/valve off
NC	Standby
NC	Standby
(D+/A)/NC	RS485 A+ / Standby
(D-/B)/NC	RS485 B- / Standby
RSB	Room card signal / external sensor (NTC20K)
GND	Room card / sensor common grounding

Honeywell Building Technologies

Greater China Building Business

Website: www.honeywell.com.cn

Service Hotline: 400-840-2233

© 2020 Honeywell International Inc.

All specifications are subject to change without notice.

THE
FUTURE
IS
WHAT
WE
MAKE IT

Honeywell